



# Unimeter Hot Keys


Tare

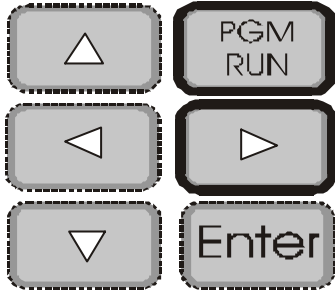


Anti - Tare

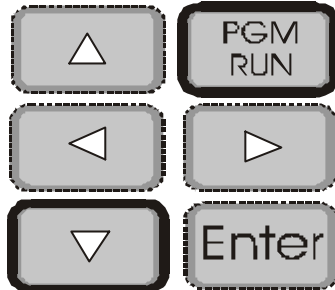


Counter reset

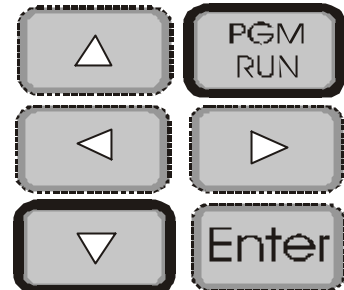


Peak (Max)

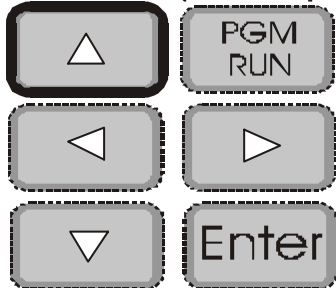


Valley (Min)

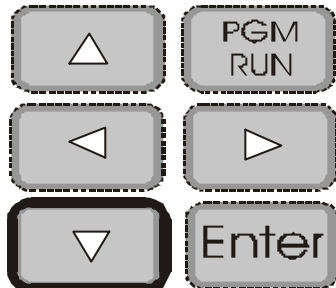


Reset P/V

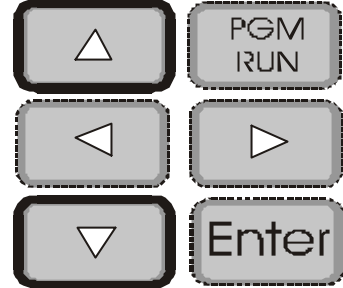


PID Setpoint

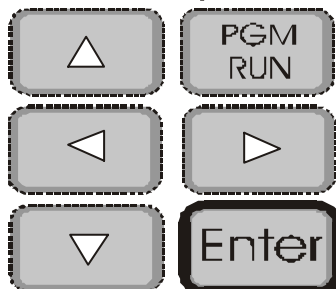

Increase SP

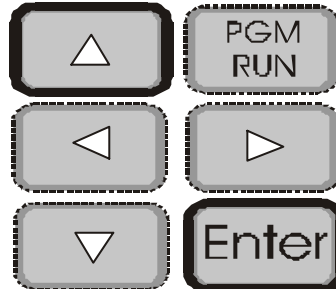


Decrease SP


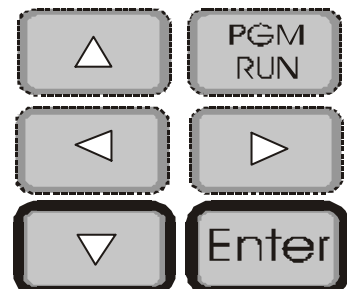


(set Special Function 231 to enable)

Analog OP

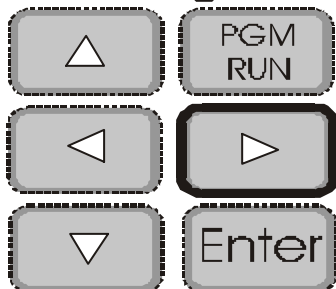

PID Auto/Man

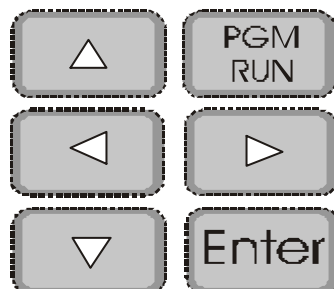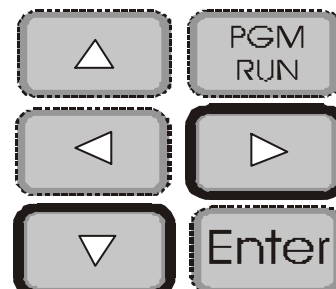

(set Special Function 244 to enable)